



## 32" LCD TV

User manual

**UP STAR USA Group**

1885 S Vineyard Ave, Ontario, CA 91761

Toll-free: 1-877-908-6777

Tel: 562-972-8098, Fax: 562-972-8068

E-mail: [Sales@Upstarusa.com](mailto:Sales@Upstarusa.com)

[www.Upstarusa.com](http://www.Upstarusa.com)

### MODEL: P32ETW

(Please read this manual carefully before operating the set  
And retain it for future reference.)

# Contents

<b>Important Safety Instructions .....</b>	<b>1</b>
WARNING.....	1
Caution.....	1
Important.....	1
REGULATORY INFORMATION.....	1
<b>GENERAL INFORMATION .....</b>	<b>3</b>
Accessories.....	3
Viewing the Control Panel .....	3
Remote Control.....	4
Batteries Installation of Remote-Control Unit.....	5
Names of each part.....	5
<b>CONNECTIONS.....</b>	<b>7</b>
Installing an Antenna .....	7
Satellite/Cable TV Set-Top Box Connections .....	8
Watching Cable TV.....	8
DVD Connections .....	9
Playing the DVD .....	9
PC Connections .....	10
How to Use as PC monitor .....	10
Digital Amplifier Connections .....	10
<b>Basic Use .....</b>	<b>11</b>
Powering the LCD TV .....	11
Selecting Input Source .....	11
<b>Application .....</b>	<b>12</b>
Operating the Menu .....	12
PICTURE MENU.....	14
SOUND MENU.....	18
CHANNEL MENU.....	21
PARENTAL CONTROL MENU.....	25
SETUP MENU .....	32
OTHERS MENU.....	35
<b>PC Mode .....</b>	<b>36</b>
<b>Trouble shooting.....</b>	<b>37</b>
<b>Specifications.....</b>	<b>38</b>

# Important Safety Instructions

## WARNING

TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

## Caution

These servicing instructions are for use by qualified service personnel only.

To reduce the risk of electric shock, do not perform any servicing other than that contained in The operating instructions, unless you are qualified to do so.

Any changes or modifications not expressly approved by the party responsible for compliance Could void the user's authority to operate the equipment.

## Important

One Federal Court has held that unauthorized recording of copyrighted TV programs is an Infringement of U.S. copyright laws.

Certain Canadian programs may also be copyrighted and any unauthorized recording in whole or In part may be in violation of these rights.

## REGULATORY INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection Against harmful interference when the equipment is operated in a residential installation. This Equipment generates, uses and can radiate radio frequency energy and, if not installed and used In accordance with the instruction manual, may cause harmful interference to radio Communication. However, there is no guarantee that interference will not occur in a particular Installation. If this equipment does cause harmful interference to radio or television reception, Which can be determined by turning the equipment off and on, the user is encouraged to try to Correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is Connected.

Consult the dealer or an experienced radio/TV technician for help.

1) Read these instructions.

- 2) Keep these instructions.
- 3) Heed all instructions.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturers Instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other Apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug Have two blades with one wider than the other. A grounding type plug has two blades and A third grounding prong. The wide blade or the third prong is provided for your safety. If The provided plug does not fit into your outlet; consult an electrician for replacement of The obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, Convenience receptacles and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or Sold with the apparatus. When a cart is used caution when moving the cart/apparatus Combination to avoid injury tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus Has been damaged in any way, such as power-supply cord or play is damaged, liquid has Been spilled or objects have fallen into the apparatus. The apparatus has been exposed to Rain or moisture, does not operate normally, or has been dropped.
- 15) The apparatus shall be disconnected from the mains by placing the power/standby switch In the standby position and unplugging the power cord of the apparatus from the AC Mains receptacle.
- 16) This product shall never be placed in a built-in installation such as a bookcase or rack Unless proper ventilation is provided or the manufacture's instructions have been Adhered to.
- 17) Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect Device shall remain readily operable.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with Liquids, such as vases. Shall be placed on the apparatus.

# GENERAL INFORMATION

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice in order to enhance product performance.

## Accessories



📖 Please make sure the following items are included with your LCD TV. If any items are missing, contact your dealer.

📖 The items color and shape may vary depending on the model.

## Viewing the Control Panel

📖 The product color and shape may vary depending on the model.

📖 You can use a button by pressing the side panel buttons.

❑ P32ETW



## Remote Control


1. **POWER:** Turns the TV on and off.
2. **INFO:** Press to display information to the TV screen.
3. **Guide:** Press to display detailed program information when viewing a digital TV program.
4. **MUTE:** Press to temporarily cut off the sound.
5. **MTS:** Press to choose stereo, mono or Separate Audio Program (SAP broadcast).
6. **0-9 /-:** Press any number of 0-9 buttons to select a TV channel, also can be used in teletext Page choosing. Press "-/" to enter a program number for multiple program channel, such as 2-1 ect.
7. **R :** Press to switch between the current and the previous channel.
8. **INPUT:** Press to display and select the available video sources.
9. **MENU:** Press to display the main on-screen menu.
10. **SLEEP:** Press to set up the TV auto turn off time.
11. **EXIT:** Press to exit the menu.
12. **▲/▼/◀/▶/ENTER:** Use to select on-screen menu items and change menu values.
13. **VOL+/-:** Press to increase or decrease the volume.
14. **CH+/-:** Press to change channels.
15. **FREEZE:** Press to freeze picture. It's not available on DTV mode.
16. **Aspect:** Press to select the aspect ratio.
17. **Freeze:** Freeze picture, press again to restore normal viewing.
18. **Fav:** Press to open the favorite channel list.
19. **Add/Del:** Press Add/Del to add or delete Favorite channel.
20. **Fav-:** Press FAV- to change forward Fav channel for TV.
21. **Fav+:** Press FAV+ to change backward Fav channel for TV.
22. **Picture:** Press to select Dynamic, Standard, Movie, User mode.
23. **Sound:** Press to select Dynamic, Soft, Movie, User mode.
24. **TV:** Press to select the TV mode directly.
25. **USB:** Press to select the USB mode directly.
26. **CC:** Press to turn closed caption on or off, When your TV set is in TV, AV or S-Video source.




## Batteries Installation of Remote-Control Unit

1. Lift the cover at the back of the remote control upward as shown in the figure.

2. Install two AAA size batteries.

 Make sure to match the '+' and '-' ends of the batteries with the diagram inside the Compartment.

3. Replace the cover.

 
 Remove the batteries and store them in cool, dry place if you won't be using the remote Control for a long time. (Assuming typical TV usage, the batteries should last for about one Year)

 
 If the remote control doesn't work, check the following:

- Is the TV power on?
- Are the plus and minus ends of the batteries reversed?
- Are the batteries drained?
- Is there a power outage or is the power cord unplugged?
- Is there a special fluorescent light or neon sign nearby?

## Names of each part


 P32ETW

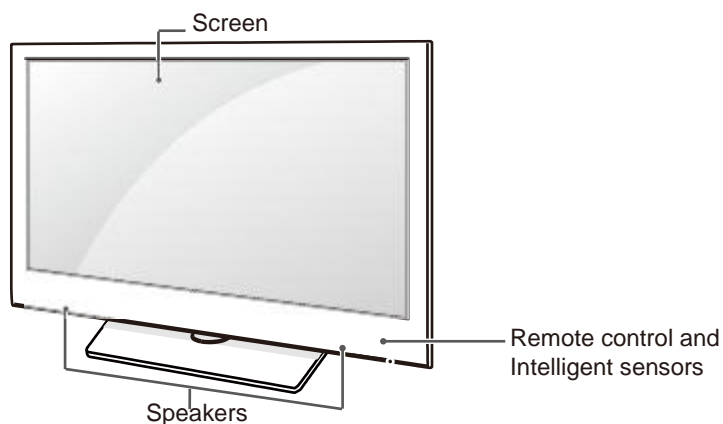

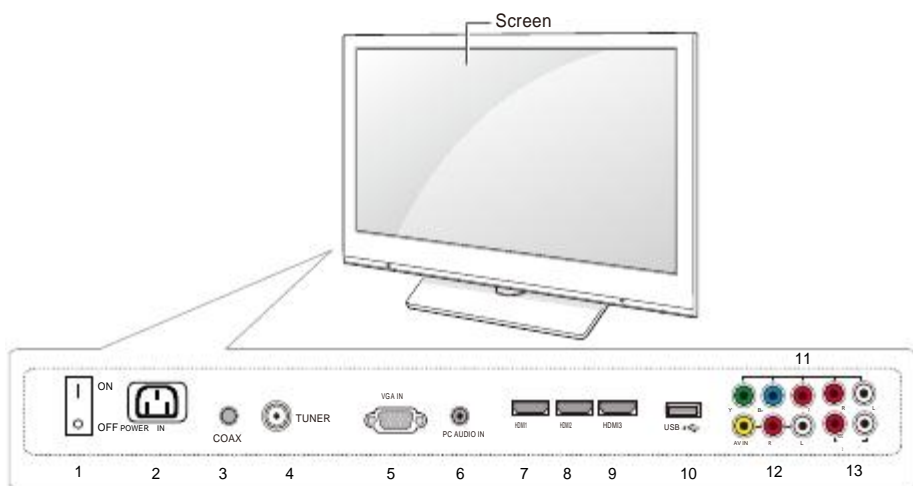

**Rear Connection panel**

1	Power ON/OFF switch	7、8、9	HDMI in jack
2	Power in jack	10	USB in jack
3	COAX jack	11	Y, Pb, Pr and AUDIO (R/L) jack
4	TV jack	12	AV IN VIDEO and AUDIO (R/L) jack
5	PC jack	13	AUDIO out jack (R/L)
6	PC Audio in jack		

 
 The product color and shape may vary depending on the model.



# CONNECTIONS

## Installing an Antenna


For connecting to ATSC or NTSC broadcasts

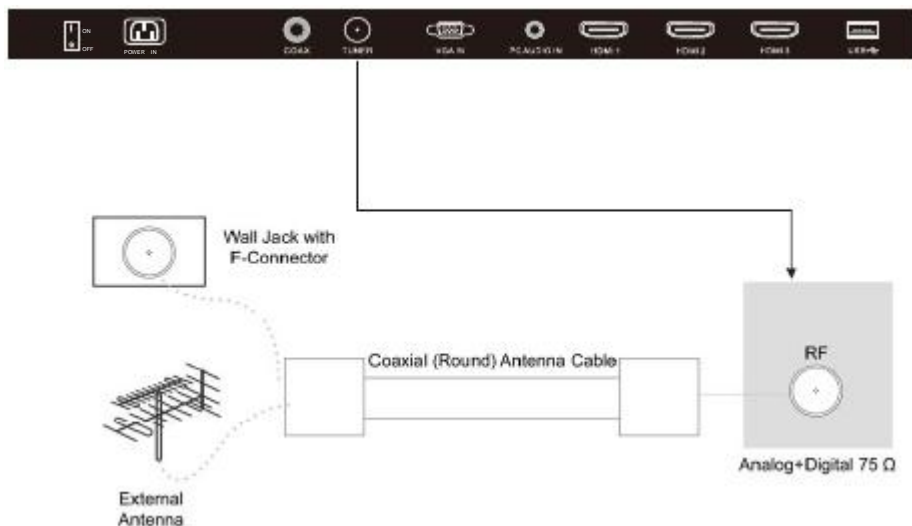

Press SOURCE button on the remote control to select TV, then press ► button to confirm.  
Then you can receive the ATSC/NTSC signal.

# Satellite/Cable TV Set-Top Box Connections

 - **Connecting To the Composite terminal**
  - ❖ In order to watch Cable TV, Subscribe to your local Cable TV company and install a separate Receiver (SET-Top-Box)
  - ❖ **Connection** Terminals of other equipment **differ** By manufacturer and model.

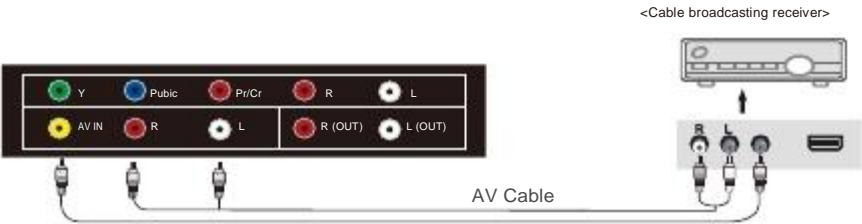

Connect the LCD TV's Composite In terminal to the cable **broadcasting** Receiver Composite Out Terminals using the Composite cable. (Make sure the color of terminals and the color of cable are The same.)

- **Connecting To the HDMI terminal**




## Watching Cable TV

 1. Turn on the LCD TV and press SOURCE **button** On the remote control.
2. Use **▲/▼ buttons** To move to "AV".
  - ❖ If HDMI has been connected, select "HDMI".
3. Turn on the cable **broadcasting** Receiver and select the channel you wish to view.

## DVD Connections


### • Connecting to the Component terminal

- ❖ Connection terminals of other equipments differ by manufacturer and model.

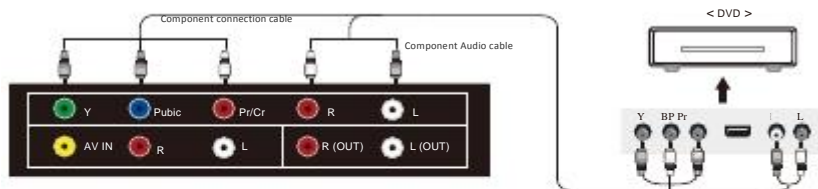

1. Connect LCD TV's Y, BP, Pr terminal to DVD's Video Out terminal using the external cable.
2. Connect LCD TV's Audio terminals (left & right) in AV1 to DVD's Audio Out terminal using the Audio cable.
3. It must match the component connection cable Y, BP, Pr between the LCD TV and DVD Player.

### • Connecting to the HDMI terminal

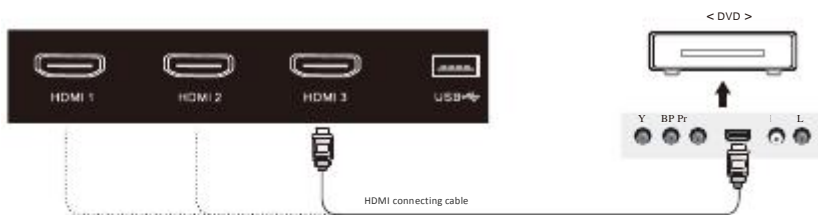 


Connecting from HDMI terminal to HDMI terminal.

## Playing the DVD

 1. Turn on the LCD TV and press SOURCE button on the remote control.
2. Use ▲/▼ buttons to move to "Yapp".
  - ❖ If HDMI has been connected, select "HDMI".
3. Turn on the DVD, insert the DVD disc and press Play button.

# PC Connections

❖ Connection terminals of other equipments differ by manufacturer and model.

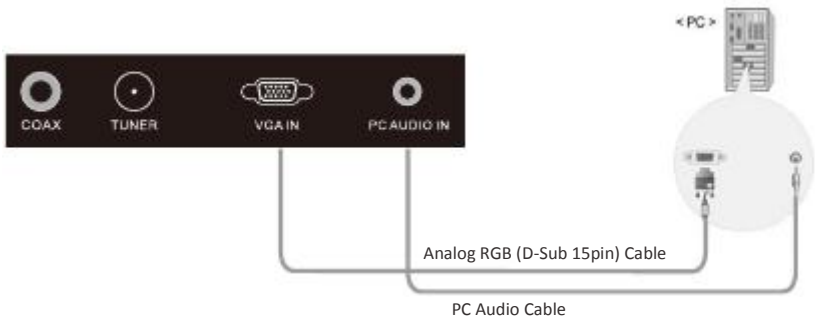

- Connect LCD TV's PC Input terminal to PC's RGB terminal using the D-Sub cable.
- Connect LCD TV's PC Audio terminal to PC's Audio terminal using the Audio cable.  
(Only for PC's with Audio terminal)

# How to Use as PC monitor

1. Turn on the LCD TV and press SOURCE button on the remote control.
2. Use ▲/▼ to move to "VGA".

# Digital Amplifier Connections

- Connecting to the Digital Amplifier

❖ Connection terminals of other equipments differ by manufacturer and model.



# Basic Use

## Powering the LCD TV

 
- Power ON/OFF
  - ❖ To turn the LCD TV on:  
Press the “POWER” button.
  - ❖ To turn the LCD TV off:  
Press the “POWER” button on the LCD TV.
  - ❖ To turn ON or OFF by remote control:  
Press the “POWER” button of the remote control.

## Selecting Input Source

You can select between the TV signal and the input signal of other equipments Connected to the TV.

Use this function to switch to the input source you wish to view.

- 🔧 Press INPUT button on the remote control.
- 🔧 Use ▲/▼ buttons to move to the desired input source.
- 🔧 Press ENTER button to confirm.

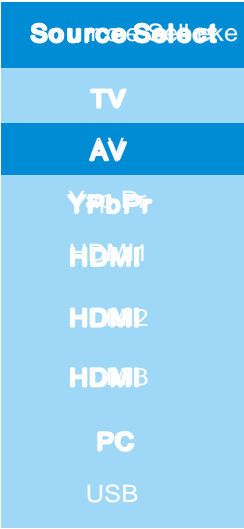

# Application

## Operating the Menu



1. Press the POWER button to turn the LCD TV on.
2. Press the MENU button on the remote control, the on-screen menu will appear on the Screen.
3. Use the ◀/▶ buttons to select your main menu option.

### PICTURE MENU:

Allows you to make adjustments your picture settings. (Select TV sources for example)



### SOUND MENU:

Allows you customize the sound options and effects. (Select TV source for example)



### CHANNEL MENU:

Customize your channel settings.



#### Parental Control MENU:

Set program rating control and input source, keypad lock function.



#### SETUP MENU:

Select closed caption options, language and time.



#### OTHERS MENU:

Set the OSD blue background, whether auto power off no signal or no operation, clear All user settings etc.



4. Use the ▲/▼ buttons to select an option of the sub-menu, and press the ► button.

While in adjustment mode, use the ◀/▶ button to change the value of the item.

5. Press the MENU button to exit the menu.

#### Note:

Only when you input the suitable signal, the relevant items can be activated.

## PICTURE MENU



Press **▼/▲** to highlight one of the following options, and then press **ENTER** or **Enter** next sub-Menu to adjust it. Press **EXIT** to clear on-screen menu or **MENU** back to the previous menu.

**Picture Settings** Adjust the picture quality including brightness, contrast, color, tint, Sharpness. For details.

**Screen Size** Press **▲/▼** To select the display aspect ratio till the picture is at onto the screen. The options are different according to different input source.

**PC** Wide/Dot by Dot. Dot by Dot means NOT any scaling to original input pixels size.

**AV/Yapp/HDMI/TV** Normal/Wide/Cinema/Zoom. Generally each aspect ratio is suitable

For one input format. For example *Normal* is suitable to watch common TV program. *Wide* will Do horizontal scaling on the wide panel. *Cinema* is for the 2.39:1(perhaps marked as 2.40:1 on The disc elm *Zoom* is suitable to view the analog TV which has wide (16:9) content on the 16:9 Panel.

**PC Settings** The item is available only for PC DB15or PC DVI input mode.

**Color Temperature** Press **▲/▼** To select the color temperature that you feel comfortable.

**Normal** Basically will be accepted by most people.

**Cool** means a high color temperature that will feel cool.

**Warm** means a low color temperature that will feel warm.

**Advanced Picture Settings** The item is some special picture feature.



## PICTURE MENU/ PICTURE Settings



When Picture Mode is set to User, the following settings can be manually adjusted.

Press PMODE shortcut button on the remote control to select picture mode directly.

### Adjusting the values

#### Picture Mode

Highlight the item and Press ◀/▶ to select. Movie/Dynamic/Standard/User

#### Brightness/Contrast/Color/Tint/Sharpness

Highlight the item and press ▶ And a process bar

Appears, then press ◀/▶ to adjust the value. Tint is

Available when analog TV or NTSC-system AV or S video.

Press MENU to back the Picture Settings menu.



## PICTURE MENU/ PC Settings



PC Settings Menu is available only in PC DB15 or DVI mode. When DVI signal input, only Horizontal Position and Vertical Position can be adjusted.

Press ▼/▲ to highlight one of the following options, and then press ENTER to select it.



**Auto Adjust** Automatically adjusts Clock, Phase, H-Position and V-Position settings. In order to get a good result, you should open a fling the screen picture before executing Auto Adjust.

**Horizontal Position** Shift the screen slightly to left or right.

 
**Vertical Position** Shift the screen slightly up or down.

**Clock** Adjust the DB15 picture signal sampling clock rate.

**Phase** Adjust the DB15 picture signal sampling phase. It maybe affects the definition. Wrong Value maybe result the interference.

**Reset** the parameters of current menu to default value.

# PICTURE MENU/ Advanced Picture Settings

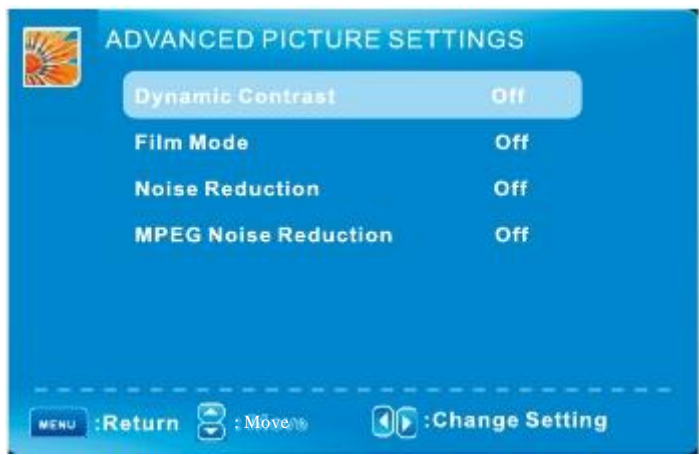

Press ▼/▲ to highlight the item and press ENTER or ► to display the sub-menu as following.

## Dynamic Contrast Of/Low/Medium/High

The system will adjust the luminance curve by analyzing the picture content dynamically.

## Film Mode OFF / ON

For the 2:2 or 3:2 format signal of cinema, enable special pixel process to reduce the hick of moving Area.

 
## Noise Reduction Of/Low/Medium/High

You can clear up analog TV signal by reducing the dot noise. This feature is not available at PC Or Media source.

## MPEG Noise Reduction Of/Low/Medium/High

Similar with the Noise Reduction, you can set to reduce the block noise.

## SOUND MENU

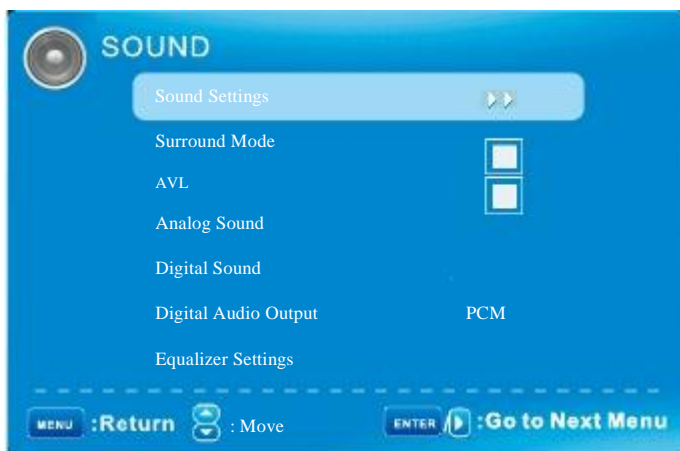

**Sound Settings** Set the sound mode, and Bass /Treble/Balance.

**Surround Mode** Set to enjoy the virtual surround sound. Press ENTER to set or cancel.

**AVL** Auto Volume Level. Press ENTER to set or cancel. When AVL is set on, it will limit the Sound being heard when sudden changes in volume occur during commercial breaks or Channel changes. Usually be enabled at night.


**Analog Sound** Available at analog TV channels. SAP/ Stereo/ Mono  
Set the preferred sound track of analog channels. Stereo and SAP exist on some channels. Generally SAP is a second language sound or helps the people with hearing impair.

**Digital Sound** Available at digital TV channels. English/French/Spanish  
Set the preferred sound track of digital channels. French and Spanish exist on some channels.

**Digital Audio Output** PCM/Raw/Of  
Set the audio output type of coax or optical terminal. Raw means output the original format Of audio stream. PCM can be matched with most AV appliers.

**Equalizer Settings** Adjust the curve of 7 bands equalizer.

## SOUND MENU/ Sound Settings

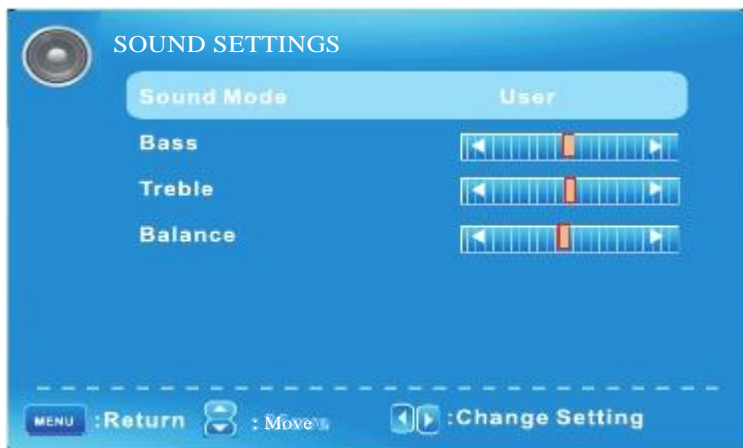 

**Sound Mode** Standard/Dynamic/Soft/User

Only in User mode, the follow items can be adjusted.

**Bass** Adjust the low frequency band response.

**Treble** adjust the high frequency band response.


**Balance** Adjust the level of sound coming from the left or right speaker.

### Adjust the Bass/Treble/Balance

 1 Set Sound Mode to User.

2 Highlight the item and press ◀/▶ to display  
The sub-menu, then press ◀/▶ to adjust the value.



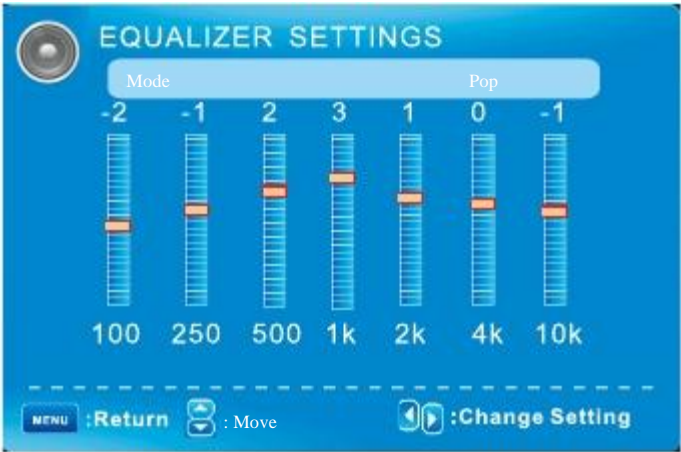

Mode      OFF/Rock/Pop/Jazz/User (only in User mode, the following can be manually adjusted.)

## Adjust Equalizer Settings

Based on your favorites about which frequency band need to be adjusted, make small Adjustment with certain frequency band at a time. Suggest NOT making too large changes.

- 1 Set Mode to User.
- 2 Press ▼ to select the rest (100Hz) item, then press ◀▶ to select the band to be turned.
- 3 Press ▼/▲ to adjust the value.

## Channel MENU



Note: The menu is available only at TV source.

**Channel List** You can view all the channels and choose one quickly.  
For details of setting.

 
**Favorite List** all of you favorite channels are listed in this menu and you can choose them quickly. For details of setting.

**Channel Setting** Set the favorite channels, skipped channels, label of channels.

**Signal Type** Set to Air or Cable according to your antenna source. When set to Air, TV can catch 8VSB broadcasting signal. When set to Cable, TV can catch analog and clear 64QAM/256QAM Broadcasting signal.

**Auto Channel Search** Highlight and press ENTER to start the auto searching, see page16.

## Channel MENU/ Channel List

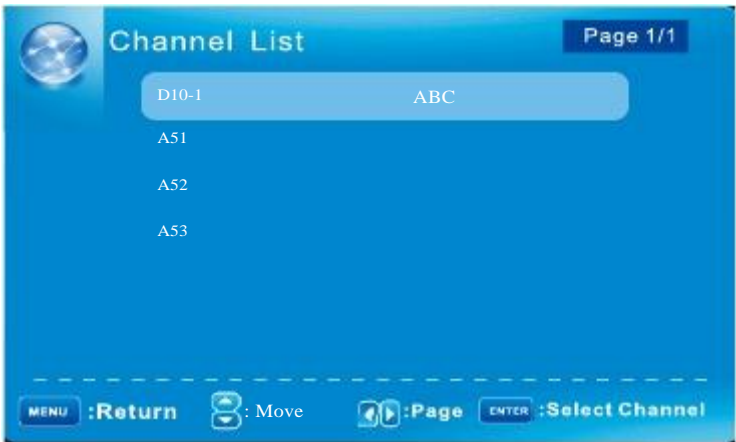


“ABC”: Label of the Channel.

Press ▼/▲ to highlight a channel and press ENTER to view it.

## Channel MENU/ Favorite List

 The list shows channels that you set as favorite.

See “Channel Settings” on page 17 to understand how to set channels be favorite.

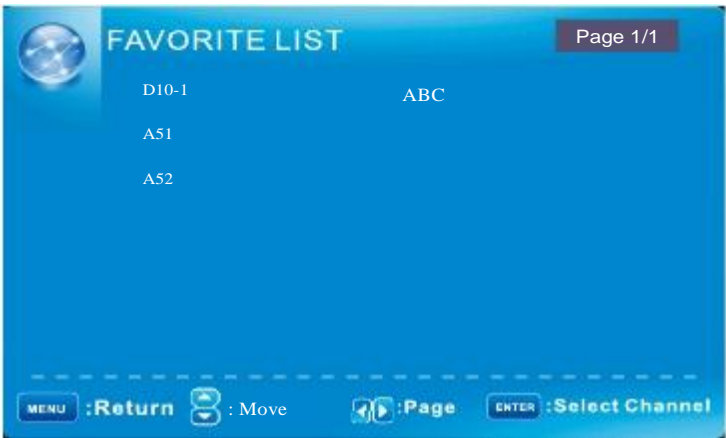



## Channel MENU/Auto Channel Search



It will search analog channels first, then digital channels.

Before execute auto channel search, please confirm your antenna type is Air or Cable.

Wrong setting of Signal Type maybe because ending no channel. Found numbers do not include encryption programs.

## Channel MENU/Channel Settings



**Skip** Set the channel to be skipped when using CH+/Ch- to view channels.

**Favorite** Set the channel to your favorite list.

**Label** Rename label of the channel.

### Change the settings

#### Skip & Favorite

1 Press ▼/▲ to select the channel you want to set.

 
2 Press ◀/▶ to highlight corresponding item, and press ENTER to set or cancel.

#### Label

1 Press ▼/▲ to select the channel and ENTER to enter the edit state.

2 Press ▼/▲ to select the character, press ◀/▶ to move the cursor. Total seven letters.

## PARENTAL CONTROL MENU

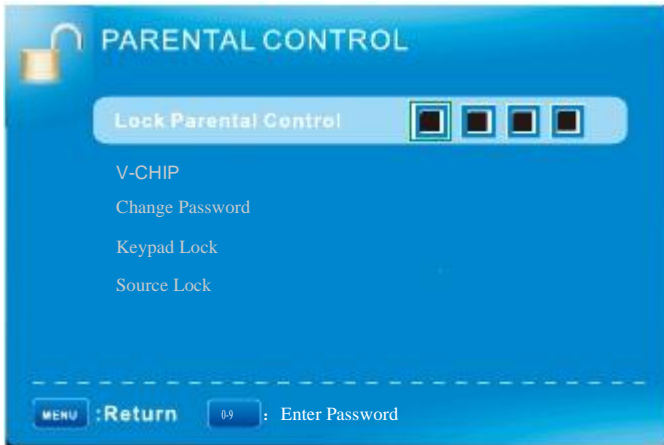

Note: The default user password is "0000", and if forget what you set, try "1470".

**Lock Parental Control** The following items are only available if the password input is correct.

**V-CHIP** Include below settings:

**US V-Chip** Rating system used at USA.

**Canada V-Chip** Rating system used at Canada.

**Block Unrated Show** Control whether locks the program that have not any valid rating bag.

**Downloadable Rating** Control the RRT5 setting which is valid only at some digital cable channels.


**Clear Downloadable Data** Select to clear the previous downloadable rating data.

### Change Password

**Keypad Lock** Set to prevent it from being used by young children, or other unexpected usage.

**Source Lock** Set to lock the using of specie source.

# PARENTAL CONTROL MENU/ Lock Parental Control Settings

 
Press ▼/▲ to highlight one of the following options, and then press ENTER or  enter next sub-Menu to adjust it. Press EXIT to clear on-screen menu or MENU back to the previous menu.

## How to access to hotel menu


1、 Press the menu button on the remote control, the main menu will display.



2、 Choosing“PARENTAL”, look for and select“Lock Parental Control” option .input the password: 0000, The “hotel Menu” would be active; the following items will be select:

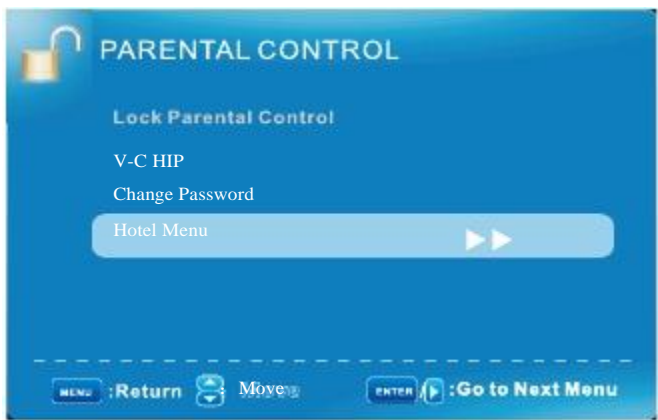

**PARENTAL CONTROL MENU/ Hotel Lock Settings**

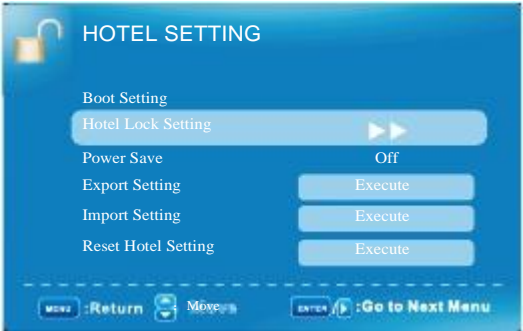 

**A. Tuner Lock:**

 
Press ▲▼ to select tune to lock, then press ENTER to set it to lock. Moreover, it could not search the Channel, .but change available channel.

**B. Key Padlock**

Press ▲▼ to select keypad if you want to lock, and then press ENTER to set it to lock. Meanwhile, remotes Control only could be used for selection.

**C. Menu Lock**

Press ▲▼ to select the menu you want to lock, and then press ENTER to set it to lock. If anyone want to Use this menu, the reset is needed.

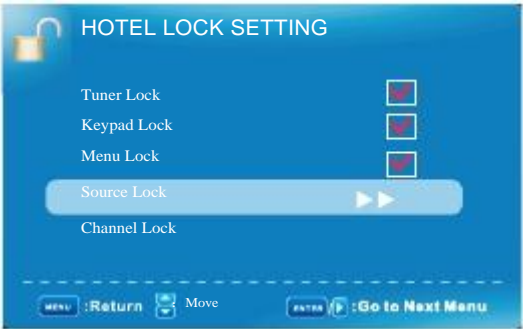

**Disuse Lock:**

Press ▲▼ to select the source you want to lock, and then press ENTER to set it to lock. If Anyone want to use this source, the reset is needed.



# PARENTAL CONTROL MENU/US V-CHIP

For the United States, the rating setting basically include the following options: Movie Rating, TV Rating.

## PARENTAL CONTROL MENU/ Movie Rating

**This system defines the rating controls which come from MPAA rules**



### Rating define

	General audience. All ages admitted.
PG-13	Parental guidance suggested. Some material may not be suitable for children.
R	Parents strongly cautioned. Some material may be inappropriate for children under 13.
NC-17	Restricted. Children under 17 require accompanying parent or adult guardian.
X	No one 17 and under admitted.
	Adult audience only.

PARENTAL CONTROL MENU/ TV Rating

The TV ratings compose of two aspects: age-based and content-based.



Age	Deane	Content	Define
TV-Y	General audience	FV	Fantasy violence
TV-Y7	Parental guidance suggested	D	Suggestive dialogue
TV-G	Parents strongly cautioned	L	Strong language
TV-PG	Retracted	S	Sexual situations
TV-14	No one 17 and under admitted	V	Violence
TV-MA	Adult audience only		

Note: The content ratings will increase depending on the level of the age-based rating. For Example, a program with a TV-PG V (violence) rating may contain moderate violence, while a TV-14 V (violence) rating may contain intense violence. So locking a higher level option will Automatically cause locking the options that has more sensitive level.

# PARENTAL CONTROL MENU/ Canada V-CHIP

For Canada, the rating settings include the following options: English Rating, French Rating.

## English Rating

These ratings are for programs which are using English rating system.

Rating	Defined as
C	Children
C8+	Children 8 years and older
G	General programming
PG	Parental guidance
14+	Viewers 14 and older
18+	Adult programming



## French Rating

 
The ratings are for programs which are using French rating system.

Rating	Defined as
G	General
8 ands+	Not recommended for younger children
13 ands+	Not recommended for children Under age 13
16 ands+	Not recommended for ages under 16
18 ands+	This program is restricted to adults





**PARENTAL CONTROL MENU/ Change Password**

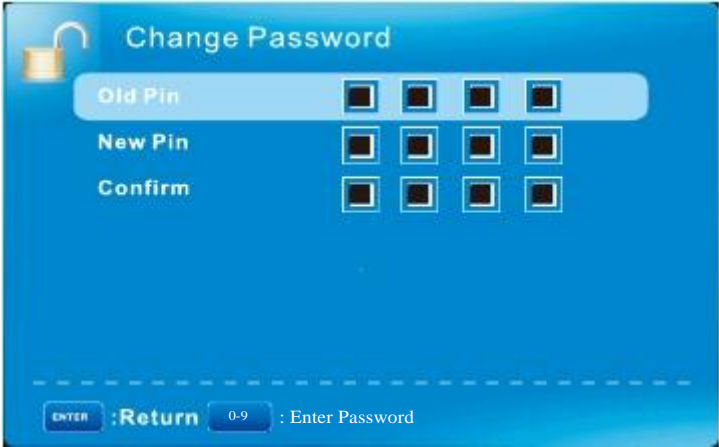

At rest you should enter the correct old password then enter new password twice. If you lost your password, try to enter “1470”.

**Source Lock**

Press ▼/▲ to select the source you want to lock, and then press ENTER to set it to lock. If anyone Want to use this source, the password is needed.



## SETUP MENU



**Closed Caption (CC)** Include below options:

**Caption Display** or hide the CC.

**Analog Caption Type** Select from below closed-caption modes for analog programs.

CC1, 2, 3, 4 displays corresponding caption channel of an analog program. (Usually be set to CC1 For most programs.)

Text1, 2, 3, 4 displays corresponding text service channel of an analog program.

**Digital Caption Type** Applies only to digital channels with closed caption.

Service1, 2, 3,4,5,6 these are deferent service data channels.

 
**Digital CC Preset** Default/Custom If set to Custom, Digital CC Style is available.

Digital CC Style

**Menu Language** Set the menu language. English/French/Spanish.

**Clock** Set the Time Zone/Auto Clock/Day of time/Daylight Saving.

# SETUP MENU/ Digital CC Style

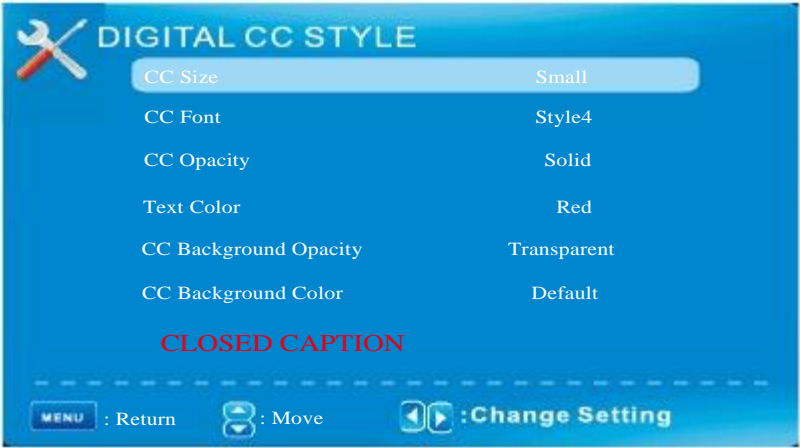

This menu is valid only for digital closed caption of digital channels.

**CC Size** Small/Standard/Large/Default

**CC Font** Style0~7, Default


**CC Opacity** Flashing/Default/Solid/Translucent/Transparent/ Default

**Text Color** Blue/Yellow/Red/Black/White/Green/Magenta/Cyan/Default

**CC Background Opacity** Flashing/Solid/Translucent/Transparent/ Default

**CC Background Color** Blue/Yellow/Red/Black/White/Green/Magenta/Cyan/Default

# SETUP MENU/ Clock

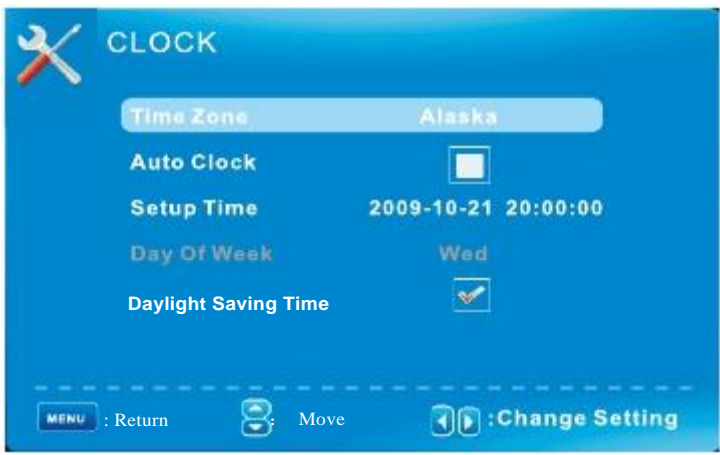 

**Time Zone**      Hawaii/Alaska /Pacific / Central/Mountain/ Eastern/ Samoa/Newfoundland

**Auto Clock** If set it to ON, the TV will sync the local clock according to the DTV broadcasting time Automatically. Otherwise you can set the time manually.

**Setup Time**      Set Auto Clock to of, then you can set the time manually.

Note: In the case of loss of power, the clock setting will be lost.

**Day of Week**      The TV will calculate current day of week according to the time.

**Daylight Saving Time**      When Auto Clock set to ON, this item is available to enable daylight Saving option or not.

## Others MENU



**Blue Back** Set the screen background color blue or not when no valid signal input. When analog TV input and has no signal, snow noise will display if this option is cleared.

If it is set, TV will automatically enter standby after 10 minutes

### No Signal Power OFF

Without signal input.

**No Operation Power OFF** If it is set, TV will automatically enter standby after 3 hours Without any operation.

**All Reset** When you highlight the item, the system will note you that “**Attention! If [All Reset] was executed, TV system is reset**”, and if you are sure to reset, press ENTER To reset.

**Audio Only** When you highlight the item, the system will note you that “**Attention! Hold on power key 3 second to restore video**”, and if you are sure not need to view (Backlight is turned OFF), press ENTER to contra. As the attention, if you want to wake up the Video, please hold on the power button for 3 seconds.

# PC Mode

## Setting up your PC software (based on Windows XP)

The Windows display-settings for a typical computer are shown below. But the actual screen on Your PC will probably be deferent, depending upon your particular version of Windows and your Particular video card. But even if your actual screen looks deferent, the same, basic set-up Information will apply in almost all cases.



1. First, click on “Control Panel” on the Windows start menu.
2. When the control panel window appears, click on “Appearance and Themes” and a display Dialog-box will appear.
3. When the control panel window appears, click on “Display” and a display dialog-box will Appear.
4. Navigate to the “Setting” tab on the display dialog-box. The correct size setting (resolution) Optimum: 1360×768.

If a vertical-frequency option exists on your display settings dialog box, the correct value is “60Hz”. Otherwise, just click “Enter” and exit the dialog box.

Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Standard Mode
720x400	31.47	70	DOS
640x480	37.9	72	VGA
800x600	37.9	60	SVGA
1024x768	48.4	60	XVGA
1280x1024	64	60	SXVGA
1360x768	47.7	60	WXVGA+

# Trouble shooting


- Do not use other functions that are not mentioned in this user's manual.
- In case a problem occurs with your LCD TV, please take the following steps rest.
- If you still have the problem, turn the power OFF and contact your dealer or an authorized Service center.


Problem	Action
The screen does not Appear.	Is the power plug pulled out? Insert the power plug. Press the power button of the remote control.
The screen appears too slowly after the power is Turned on.	This problem occurs for a brief time in the process of image elimination processing in order to hide temporary screen noise That occurs when the power is turned on. But if the screen does not come after 1 minute contact your dealer or an Authorized service center.
Screen is too bright or too Dark.	Perform brightness adjustment or Contrast adjustment.
Screen is too large or too Small.	Adjust the screen size.
Stripes appear on the Screen and it shakes.	Stop using wireless telephones, hair driers and electric drills.
The screen does not move.	Press the PAUSE button. Check if the Pause button is pressed On external equipment.
Screen appears, Voice is Not heard.	<ol style="list-style-type: none"> <li>1. Press the "MUTE" button.</li> <li>2. Increase the sound level by pressing volume adjustment Button.</li> <li>3. Check if sound terminal of external input is connected Properly.</li> <li>4. Check if audio cables are connected properly.</li> <li>5. Select and check the other input.</li> </ol> <p>If the sound still does not work and the other channels are the same after you have done as the above, contact your dealer or An authorized service center.</p>
Remote control does not Work.	<ol style="list-style-type: none"> <li>1. Check if main power is On.</li> <li>2. Check that the batteries of the remote controller were Loaded properly.</li> <li>3. Check to see if any obstacle exists between the LCD TV and The remote control, then remove it, if any.</li> <li>4. If the batteries have no power, replace them with two new Batteries.</li> </ol>


- This LCD TV is for household use and registered as harmless on electromagnetic waves.
- Therefore, you can use it in every location as well as residential areas.

## Specifications

<b>Model</b>		P32ETW
<b>LCD Panel</b>	<b>Panel Size</b>	32" Widescreen TFT LCD
	<b>Resolution</b>	1366×768 Pixel
	<b>Number of Colors</b>	16.7M
	<b>Viewing Angle</b>	178°/178°
<b>Dynamic Contrast Ratio</b>		50,000:1
<b>Input Connector</b>	<b>AV</b>	1
	<b>Yapp</b>	1
	<b>AUDIO (L/R)</b>	2(AV and Yapp audio input)
	<b>PC/AUDIO (L/R)</b>	1
	<b>HDMI</b>	3
	<b>RF</b>	1
	<b>USB</b>	1
<b>Output Connector</b>	<b>COAX</b>	1
	<b>AUDIO (L/R)</b>	1
<b>Input</b>		100-240V ~ 50/60Hz 2.5A MAX
<b>Standby Power Dissipation</b>		<1W
<b>Power Consumption</b>		200W MAX
<b>Dimension(With stand)</b>		793mmx564mmx245mm(WXHXD)
<b>Dimension(Without stand)</b>		793mmx501mmx104mm(WXHXD)
<b>Weight (N.W.)</b>		9.8Kg ( With stand ) / 8.3Kg ( Without stand )

 Design and Specification are subject to change without prior notice.

 Weight and dimensions are approximate.

 Operating temperature 0°C~50°C, relative humidity 10-90%.



# Up star USA Group

## Limited Warranty for LED & LCD TVs.

Upstar & Tanpo LCD/LED TV products are accompanying Upstar USA Group's warranty. It covers to the original purchaser of a new product against defects in materials and workmanship for a period of One (1) year of non-commercial usage and ninety (90) days of commercial use. If the unit exhibits a defect in normal use within the warranty period, Upstar USA Group, will, at its sole option, either repair or replace it. .

As a condition to any warranty services obligation, the consumer must present this Warranty Certificate along with a copy of the original purchase invoice.

To obtain warranty service, contact Upstar USA Group Technical Support via email: [techsupport@upstarusa.com](mailto:techsupport@upstarusa.com) or via phone at 877-908-6777. Pre-authorization must be obtained before sending any product to a Upstar USA Group service center.

### What the warranty does not cover:

1. Any product, on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
  1. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, Unauthorized product modification, or failure to follow instructions supplied With the product.
  2. Repair or attempted repair by anyone not authorized by up star.
  3. Damage to or loss of any programs, data or removable storage media.
  4. Software or data loss occurring during repair or replacement.
  5. Any damage of the product due to shipment.
  6. Removal or installation of the product.
  7. Causes external to the product, such as electric power fluctuations or failure.
  8. Use of supplies or parts not meeting up star specifications.
  9. Normal wear and tear.

10. Failure of owner to perform periodic product maintenance as stated in User Guide, such as cleaning of user-cleanable projector filters.
  11. Any other cause which does not relate to a product defect.
  12. Damage caused by static (non-moving) images displayed for lengthy periods of Time (also referred to as image burn-in).
  13. Damage to, or abuse of, the coating on the surface of the display through Inappropriate cleaning as described in product User Guide.
- 3. Removal, installation, and set-up service charges, including wall-mounting of product.**
- 4. Freight and insurance cost the warranty service.**

ALL WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANT ABILITY ARE LIMITED TO ONE-YEAR DURATION OF THIS EXPRESS LIMITED WARRANTY. UPSTAR USA GROUP DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES AND IN NO EVENT SHALL UPSTAR USA GROUP' LIABILITY EXCEED THE RETAIL VALUE OF THE UNIT FOR BREACH OF ANYWRITTEN OR IMPLIED WARRANTY WITH RESPECT TO THIS UNIT.

This warranty covers only new products purchased from our authorized dealers or retailers. It does not cover used, salvaged, or refurbished products.

As some states do not allow the limitation or exclusion of incidental or consequential Damages, or do not allow limitation on implied warranties, the above limitations and Exclusions may not apply to you. This warranty gives you specific legal rights, and you May also have other rights that vary from state to state.

## **The Customer Services & Technical Support**

- 1. To obtain warranty service, please contact up star Customer Services for a Return Material Authorization number (RMA). You will be required to provide**
1. A copy of the dated sales slip.
  2. Your name.
  3. Your ship to address, email address and phone number.
  4. The serial number of the product.
  5. A description of the problem.

Up star is not responsible for any returned product without an assigned RMA.

For Warranty, Technical Support, Customer Service, Missing or Defective Parts, please call:  
1-877-908-6777 or write to:

**Up star USA Group**

1885 S, Vineyard Ave Ste 1 Ontario, CA 91761

[www.Upstarusa.com](http://www.Upstarusa.com)

Useful Information about:

(1) Technical support, Parts/Accessories, email to: [RMA@upstarusa.com](mailto:RMA@upstarusa.com)

(2) Warranty Service and/or replacement, email to: [Customerservice@upstarusa.com](mailto:Customerservice@upstarusa.com)

**Up star USA Group**

1885 S, Vineyard Ave Ste 1 Ontario, CA 91761

Toll-free: 1-877-908-6777

Tel: 562-972-8098, Fax: 562-972-8068

E-mail: [Sales@Upstarusa.com](mailto:Sales@Upstarusa.com)

[www.Upstarusa.com](http://www.Upstarusa.com)

---

Programs, specification, pricing & available are subject to change without notice. Copyright by up star  
USA Group 2011-2021 all rights reserved

# Up star Warranty Registration Card



Up star will register this warranty upon receipt of your Warranty Registration Card & a Copy of your purchase' receipt  
From one of retail locations as proof of purchase. Please submit your Warranty Registration Card & your receipt within  
Thirty (30) days of the date of purchase

To: Up star /Warranty Registration Dept.,

1885 S. Vineyard Ave, Ste 1

Ontario, CA 91761

This warranty is Valid in the United States only. Please fill this form clearly

Company Name:

Key contact name:

-----

Address:

City:

-----

State:

Zip code:

-----

Phone number:

Fax number:

-----

E-mail:

Website:

-----

Model number of purchase:

Quantity:

-----

Serial number of purchase:

-----

Date of purchase:

-----

Place of purchase:

-----

Congratulations on your purchase! Thank you very much for your business!

1885 S. Vineyard Ave Ste 1 Ontario CA 91761 Tollfree: 1-877-908-6777 or 562-927-8098 Fax: 562-927-8068

[www.upstarusa.com](http://www.upstarusa.com)